

# Door gaskets replacement



*Thinking of you*  
**Electrolux**

# How to remove the old gasket

- YOU HAVE TO CUT THE OLD GASKET STARTING FROM THE EXTERNAL SIDE AS SHOWN



# How to remove the old gasket

- YOU COMPLETE THIS OPERATION CUTTING ALL AROUND THE EXTERNAL PROFILE OF THE GASKET



# How to remove the old gasket

*Thinking of you*  
**Electrolux**

- YOU HAVE TO CUT THE INTERNAL SIDE OF THE GASKET BEFORE TO REMOVE COMPLETELY THE GASKET FROM THE DOOR STRUCTURE.



# How to remove the old gasket

- THE FINAL RESULT SHOULD BE THE SAME AS SHOWN IN THE PICTURE BELOW






# How to remove the old gasket

*Thinking of you*  
**Electrolux**

- CLEAN UP THE WHITE PLASTIC PROFILE FOAMED WITH THE DOOR STRUCTURE AND REMOVE THE PIECES OF GASKET IN EXCESS

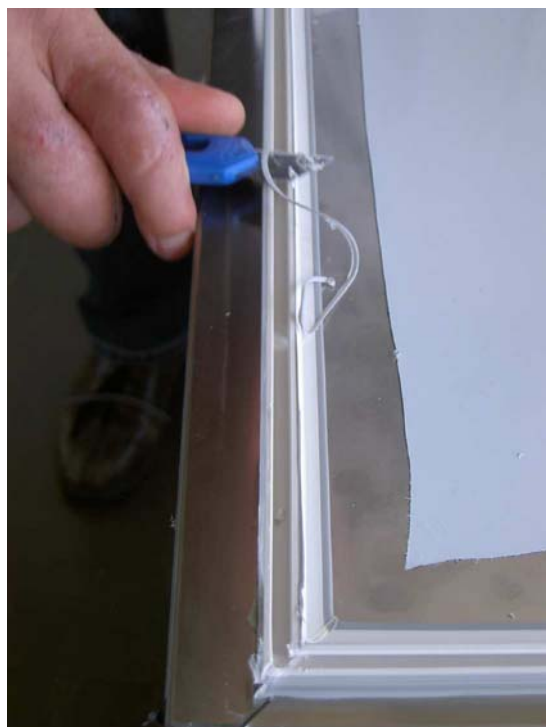

# How to remove the old gasket

*Thinking of you*  
**Electrolux**

- YOU HAVE TO OBTAIN THE FINAL RESULT AS SHOWN IN THE PICTURE BELOW



# How to remove the old gasket

- NOW YOU COULD TAKE THE NEW GASKET AND PLACE IT OVER THE WHITE PLASTIC PROFILE





# How to remove the old gasket

- THE STIFF PROFILE OF THE NEW SPARE GASKET SHOULD BE PLACED INSIDE THE PLASTIC STRUCTURE OF THE DOOR



# How to remove the old gasket

*Thinking of you*  
**Electrolux**


- YOU COULD USE A HAMMER TO GUARANTEE THE CORRECT POSITION OF THE GASKET
- YOU HAVE TO BE VERY CAREFUL TO AVOID POSSIBLE DAMAGES ON THE EXTERNAL SURFACE OF THE GASKET !!



# How to remove the old gasket

*Thinking of you*  
**Electrolux**

- PLEASE, CHECK AND VERIFY THE RESULT SO OBTAINED

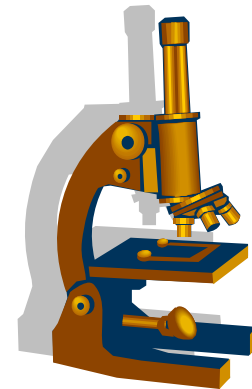

# How to remove the old gasket

- YOU HAVE TO VERIFY BOTH SIDES OF THE DOOR, WHERE THE GASKET IS POSITIONED.



# How to remove the old gasket

- FINALLY, YOU HAVE TO CHECK EACH CORNER ALSO. THE GASKET HAS TO BE IN CONTACT WITH THE DOOR (**THE GAP COULD BE MAX 1mm**)

